 


# ARTSMITH

## CORE CRAFT CENTER

Assembly Manual | Please keep for future reference.

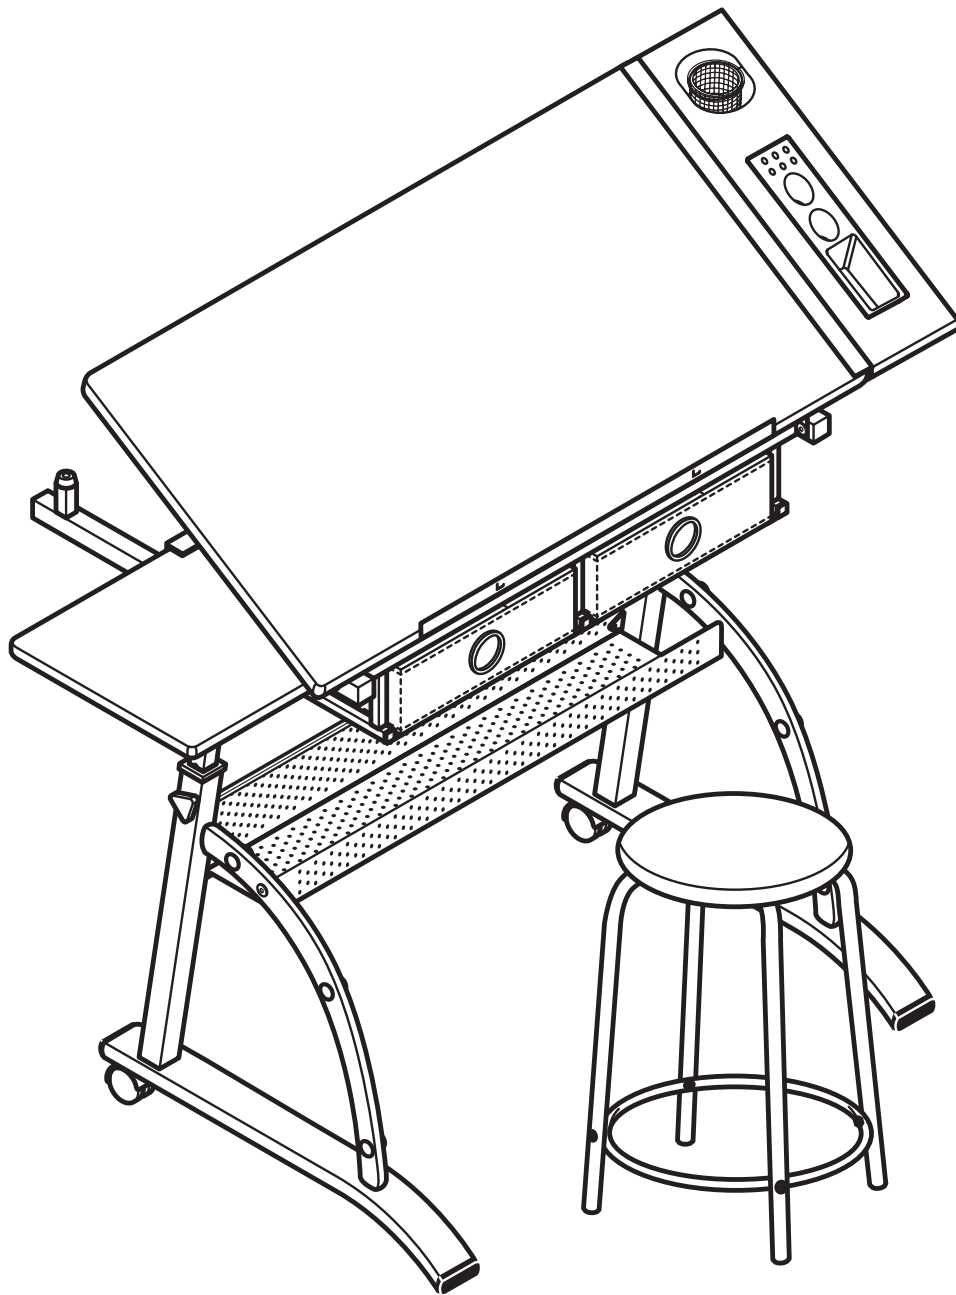

Product Support: 866.942.0492  
Mon-Fri 9-5 pm PST: 562.942.0492  
[www.studiodesigns.com](http://www.studiodesigns.com)

## ASSEMBLY INSTRUCTIONS

 
 
 
 
 



 



Carefully unpack and identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. Do not use power tools to assemble. A Phillips screwdriver is required for assembly. If you require any assistance with assembly, parts, or information on other products, please visit our website: [www.studiodesigns.com](http://www.studiodesigns.com) or call us. Check screws, nuts and bolts periodically (or every 6 months). Tighten if necessary.


 
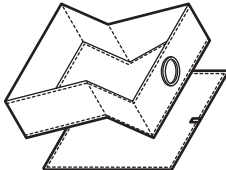 

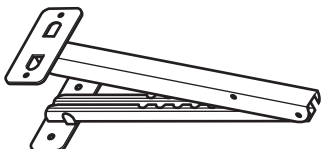 

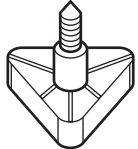 
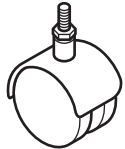 

 
 
 

Help us improve our products by filling out our Customer Response Card at [www.studiodesigns.com/crc](http://www.studiodesigns.com/crc).

 
 
 
 
 

 
 

 

 
 
 
 
## WARNING

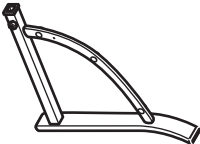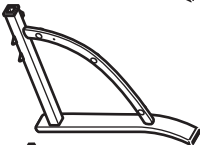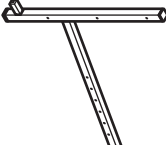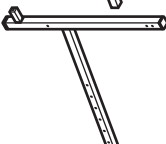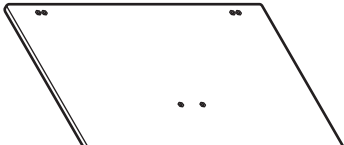Weight limit: **Top: 50 lbs.** | Side and Bottom Shelf: **15 lbs. ea.** | Stool: **175 lbs.**

Do not exceed this limit! Please use care and good judgement when using your furniture.


| DESCRIPTION                | QTY | DRAWING   |
|----------------------------|-----|---|
| 1. Left Leg                | 1   |    |
| 2. Right Leg               | 1   |    |
| 3. Left Arm                | 1   |    |
| 4. Right Arm               | 1   |    |
| 5. Top                     | 1   |    |
| 6. Side Shelf              | 1   |   |
| 7. Support Bar             | 1   |  |
| 8. Rear Bar                | 1   |  |
| 9. Front Bar               | 1   |  |
| 10. Left Rail for Drawer   | 1   |  |
| 11. Center Rail for Drawer | 1   |  |
| 12. Right Rail for Drawer  | 1   |  |

| DESCRIPTION                    | QTY | DRAWING   |
|--------------------------------|-----|---|
| 13. Rear Panel                 | 1   |    |
| 14. Bottom Shelf               | 1   |    |
| 15. Cloth Drawer               | 2   |    |
| 16. Pencil Ledge               | 1   |    |
| 17. Ratchet Arm                | 1   |    |
| 18. L Bracket                  | 2   |    |
| 19. Knob                       | 2   |   |
| 20. Caster                     | 2   |  |
| 21. Nut                        | 4   |  |
| 22. Allen Bolt - 1/4" x 1-5/8" | 5   |  |
| 23. Allen Bolt - 1/4" x 1/2"   | 14  |  |
| 24. Phillips Screw - 1/2"      | 4   |  |
| 25. Allen Screw                | 3   |  |

| DESCRIPTION                    | QTY | DRAWING   |
|--------------------------------|-----|---|
| 26. Allen Bolt - 1/4" x 5/8"   | 2   |    |
| 27. Allen Bolt - 1/4" x 1-3/8" | 6   |    |
| 28. Allen Bolt - 1/4" x 1-1/8" | 4   |    |
| 29. Allen Bolt - 3/16" x 1"    | 6   |    |
| 30. Bolt Connector             | 4   |    |
| 31. Cushion                    | 2   |    |
| 32. Metal Tray                 | 1   |    |
| 33. Cup                        | 1   |   |
| 34. Art Tray                   | 1   |  |
| 35. Seat                       | 1   |  |
| 36. Footring                   | 1   |  |
| 37. Leg A                      | 1   |  |
| 38. Leg B                      | 1   |  |
| 39. Allen Key                  | 1   |  |
| 40. Hex Wrench                 | 1   |  |

## STEP 1

 
Do not fully tighten any bolt until step 4.

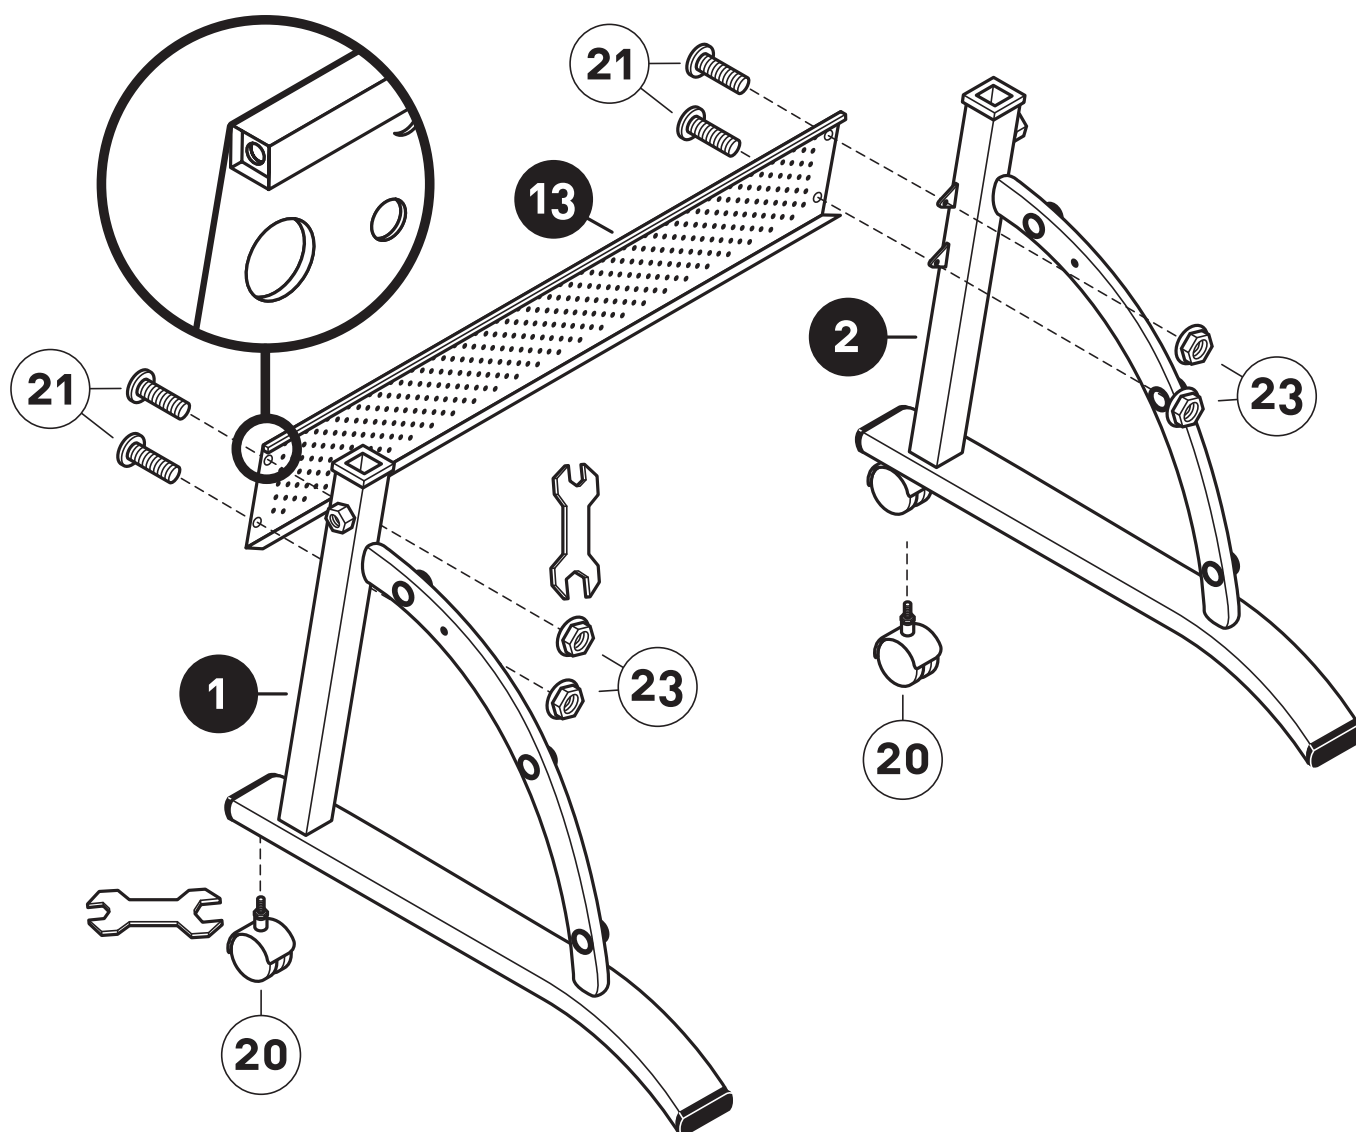

## STEP 2


**Do not fully tighten any bolt until step 4.**

 We recommend screwing Knobs (19) into second hole from the top in Left and Right Arms (3 and 4). This will give you a standard 30" high table top. Every hole raises or lowers the table by 1.75".

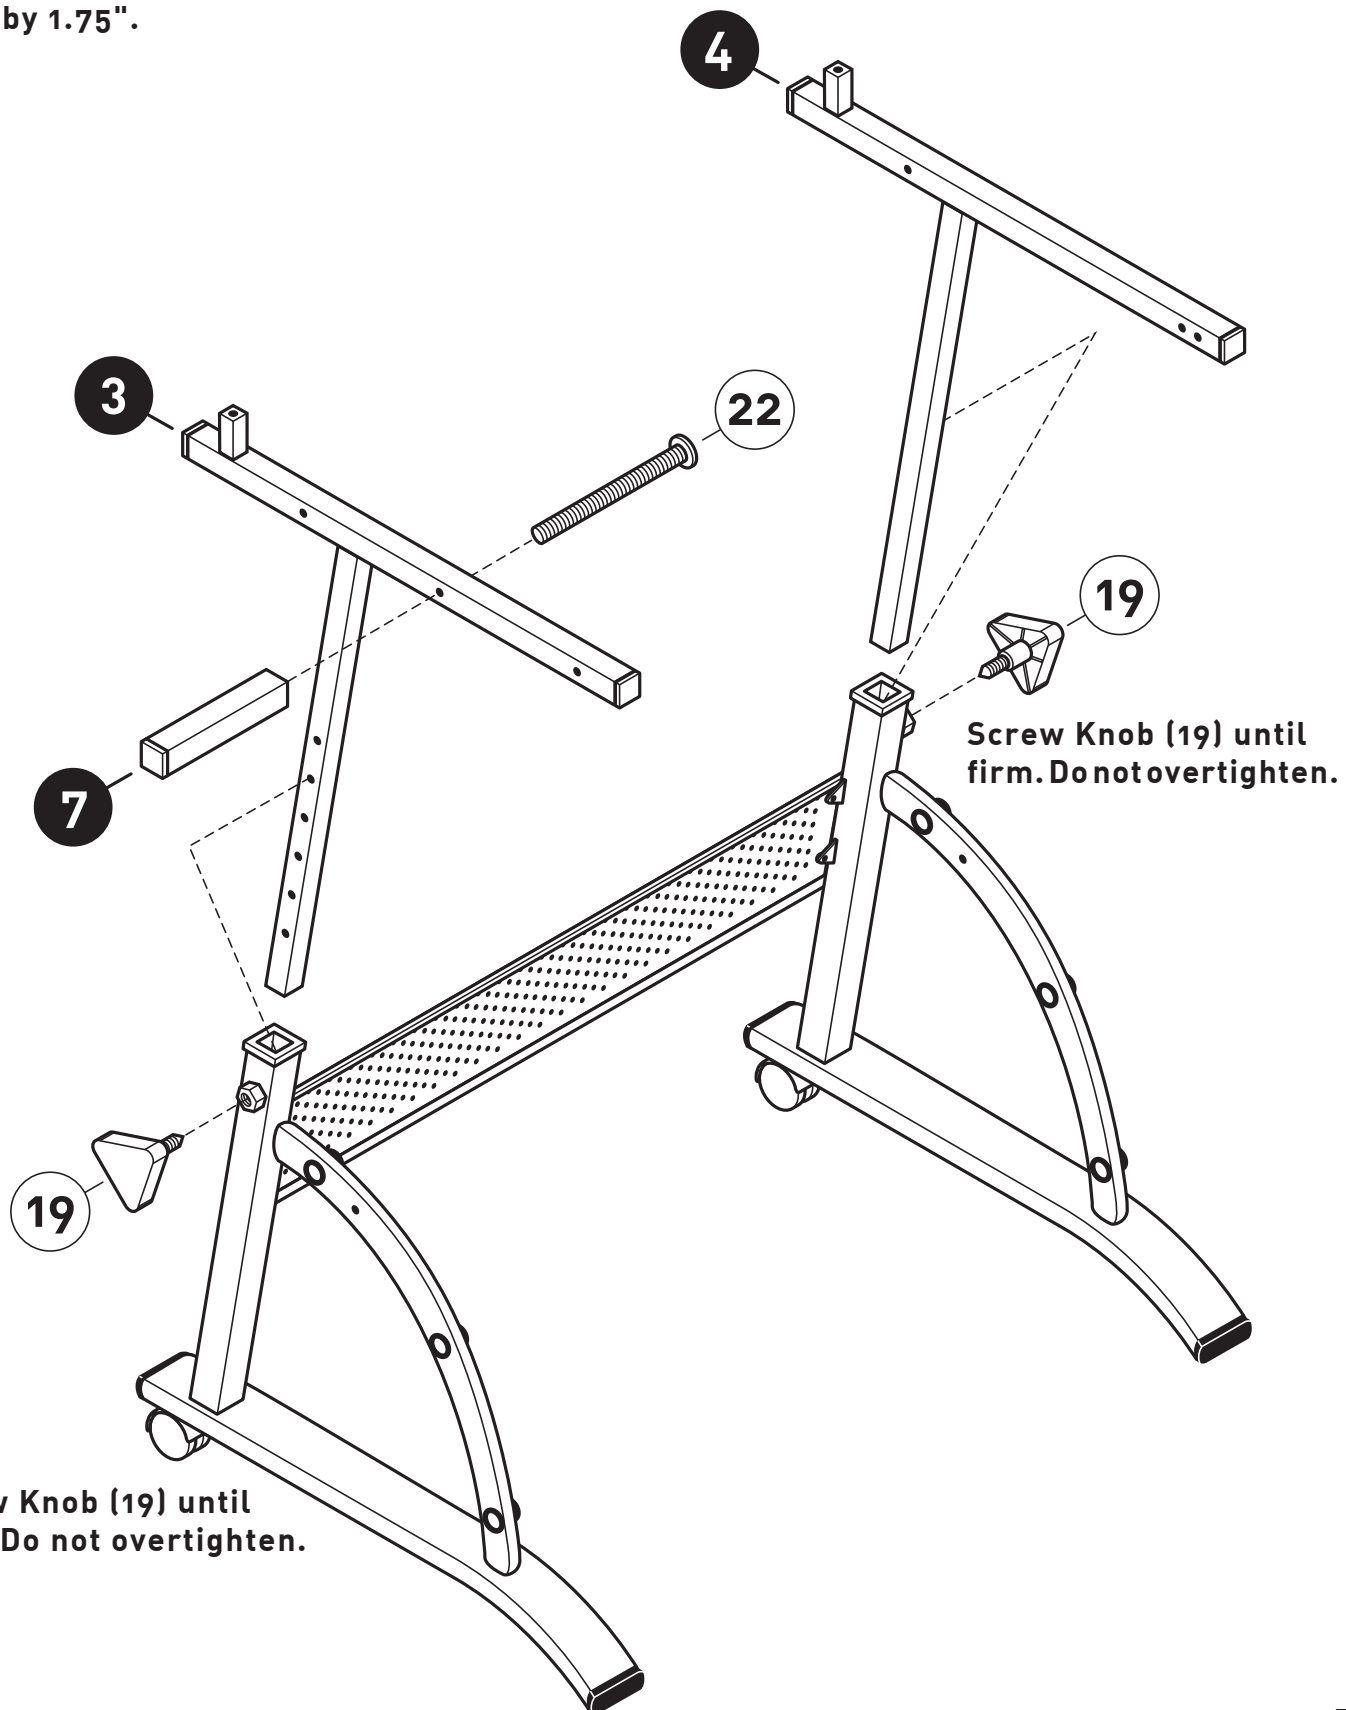

### STEP 3

 
Do not fully tighten any bolt until step 4.

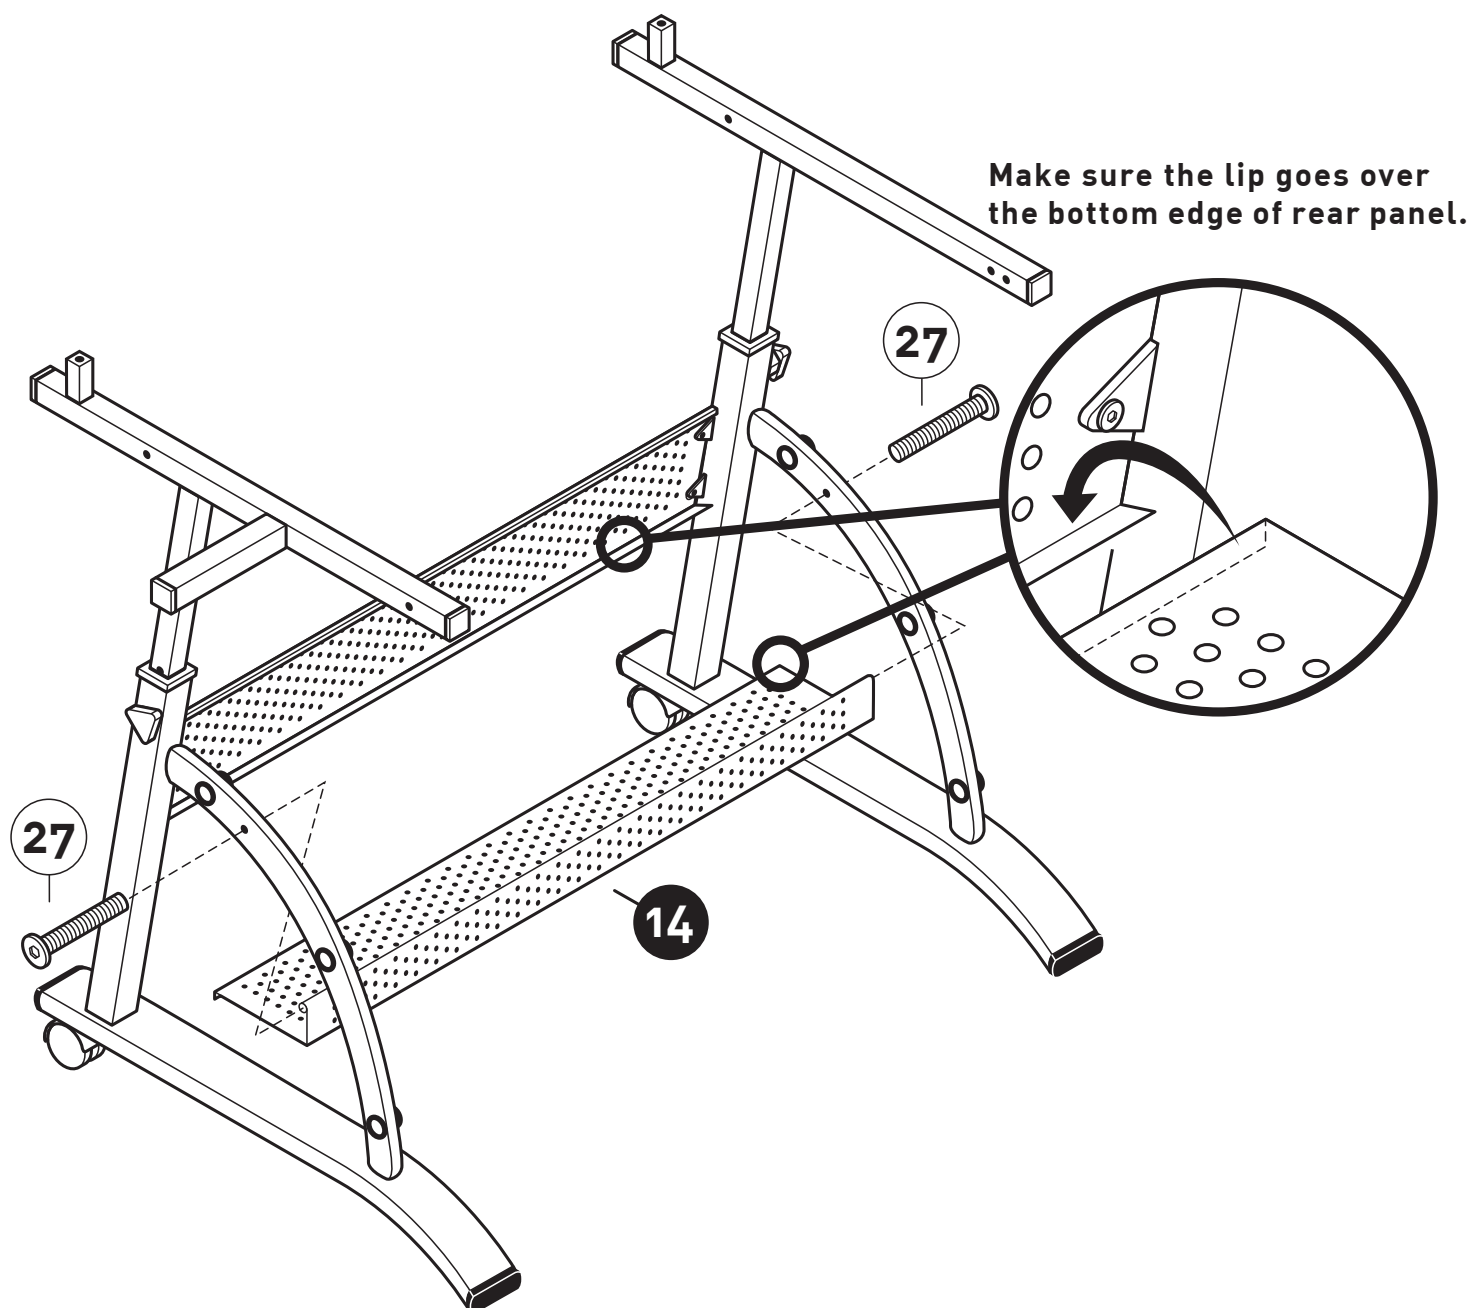




## STEP 4

 
Fully tighten all bolts from steps 1-4.

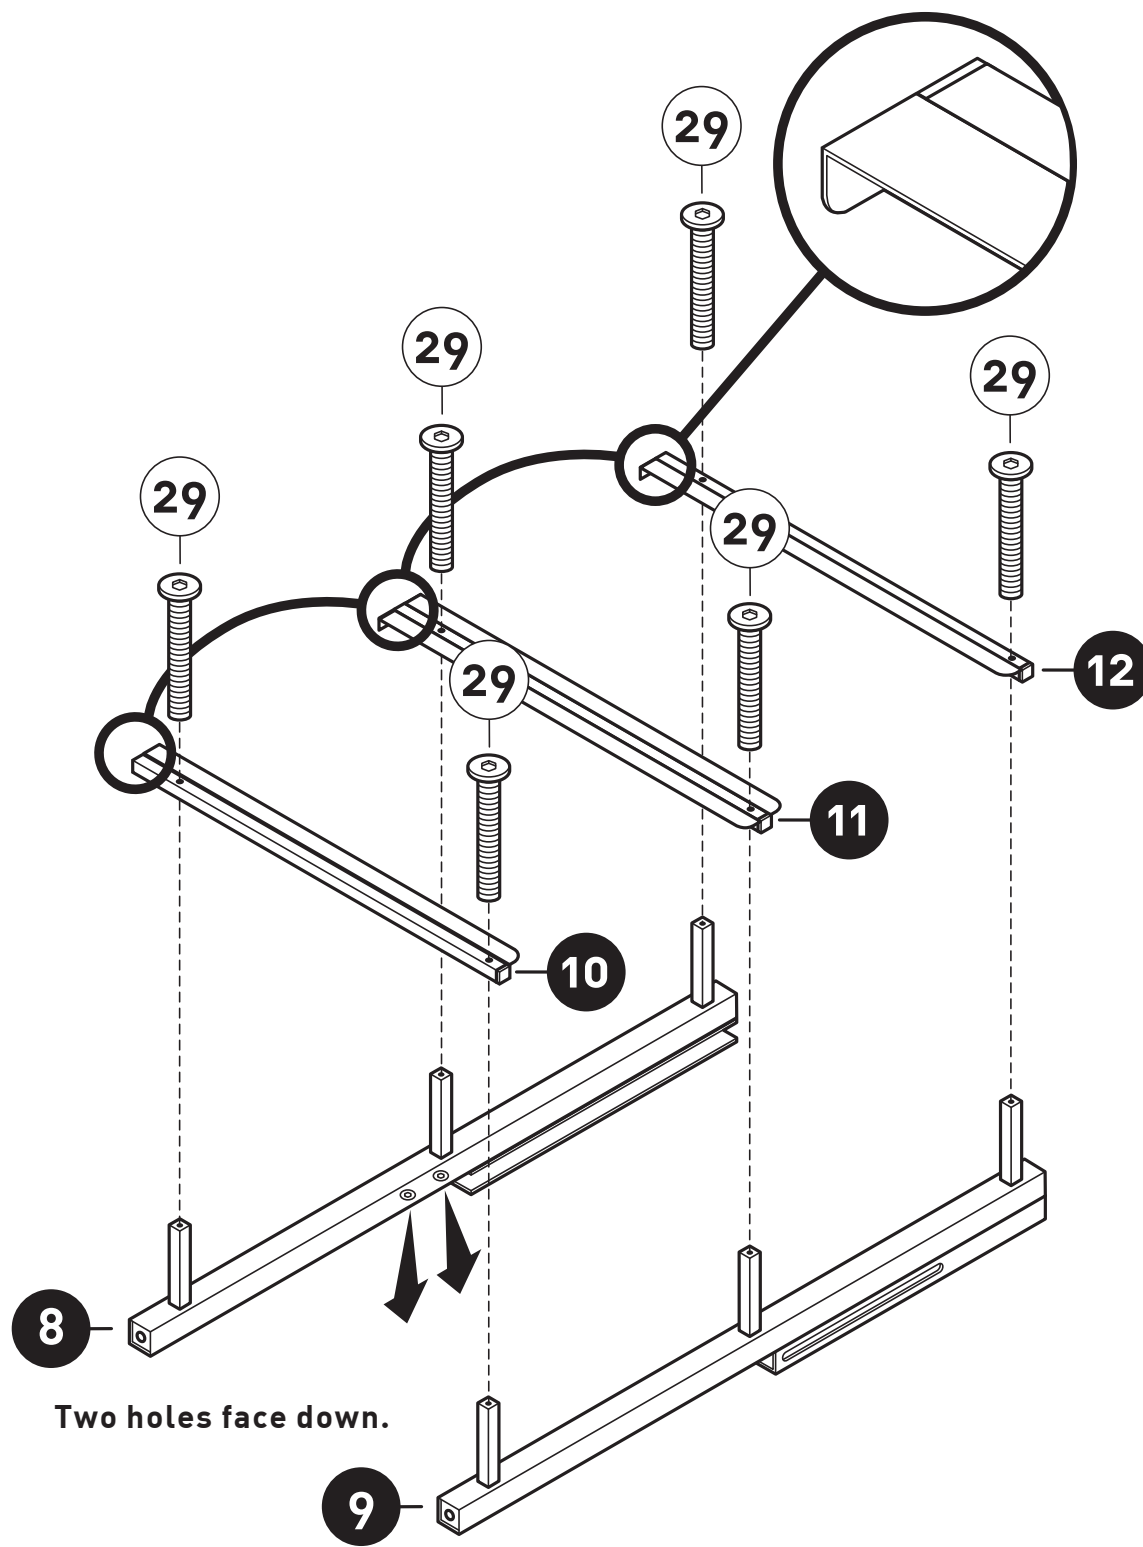

**STEP 5**

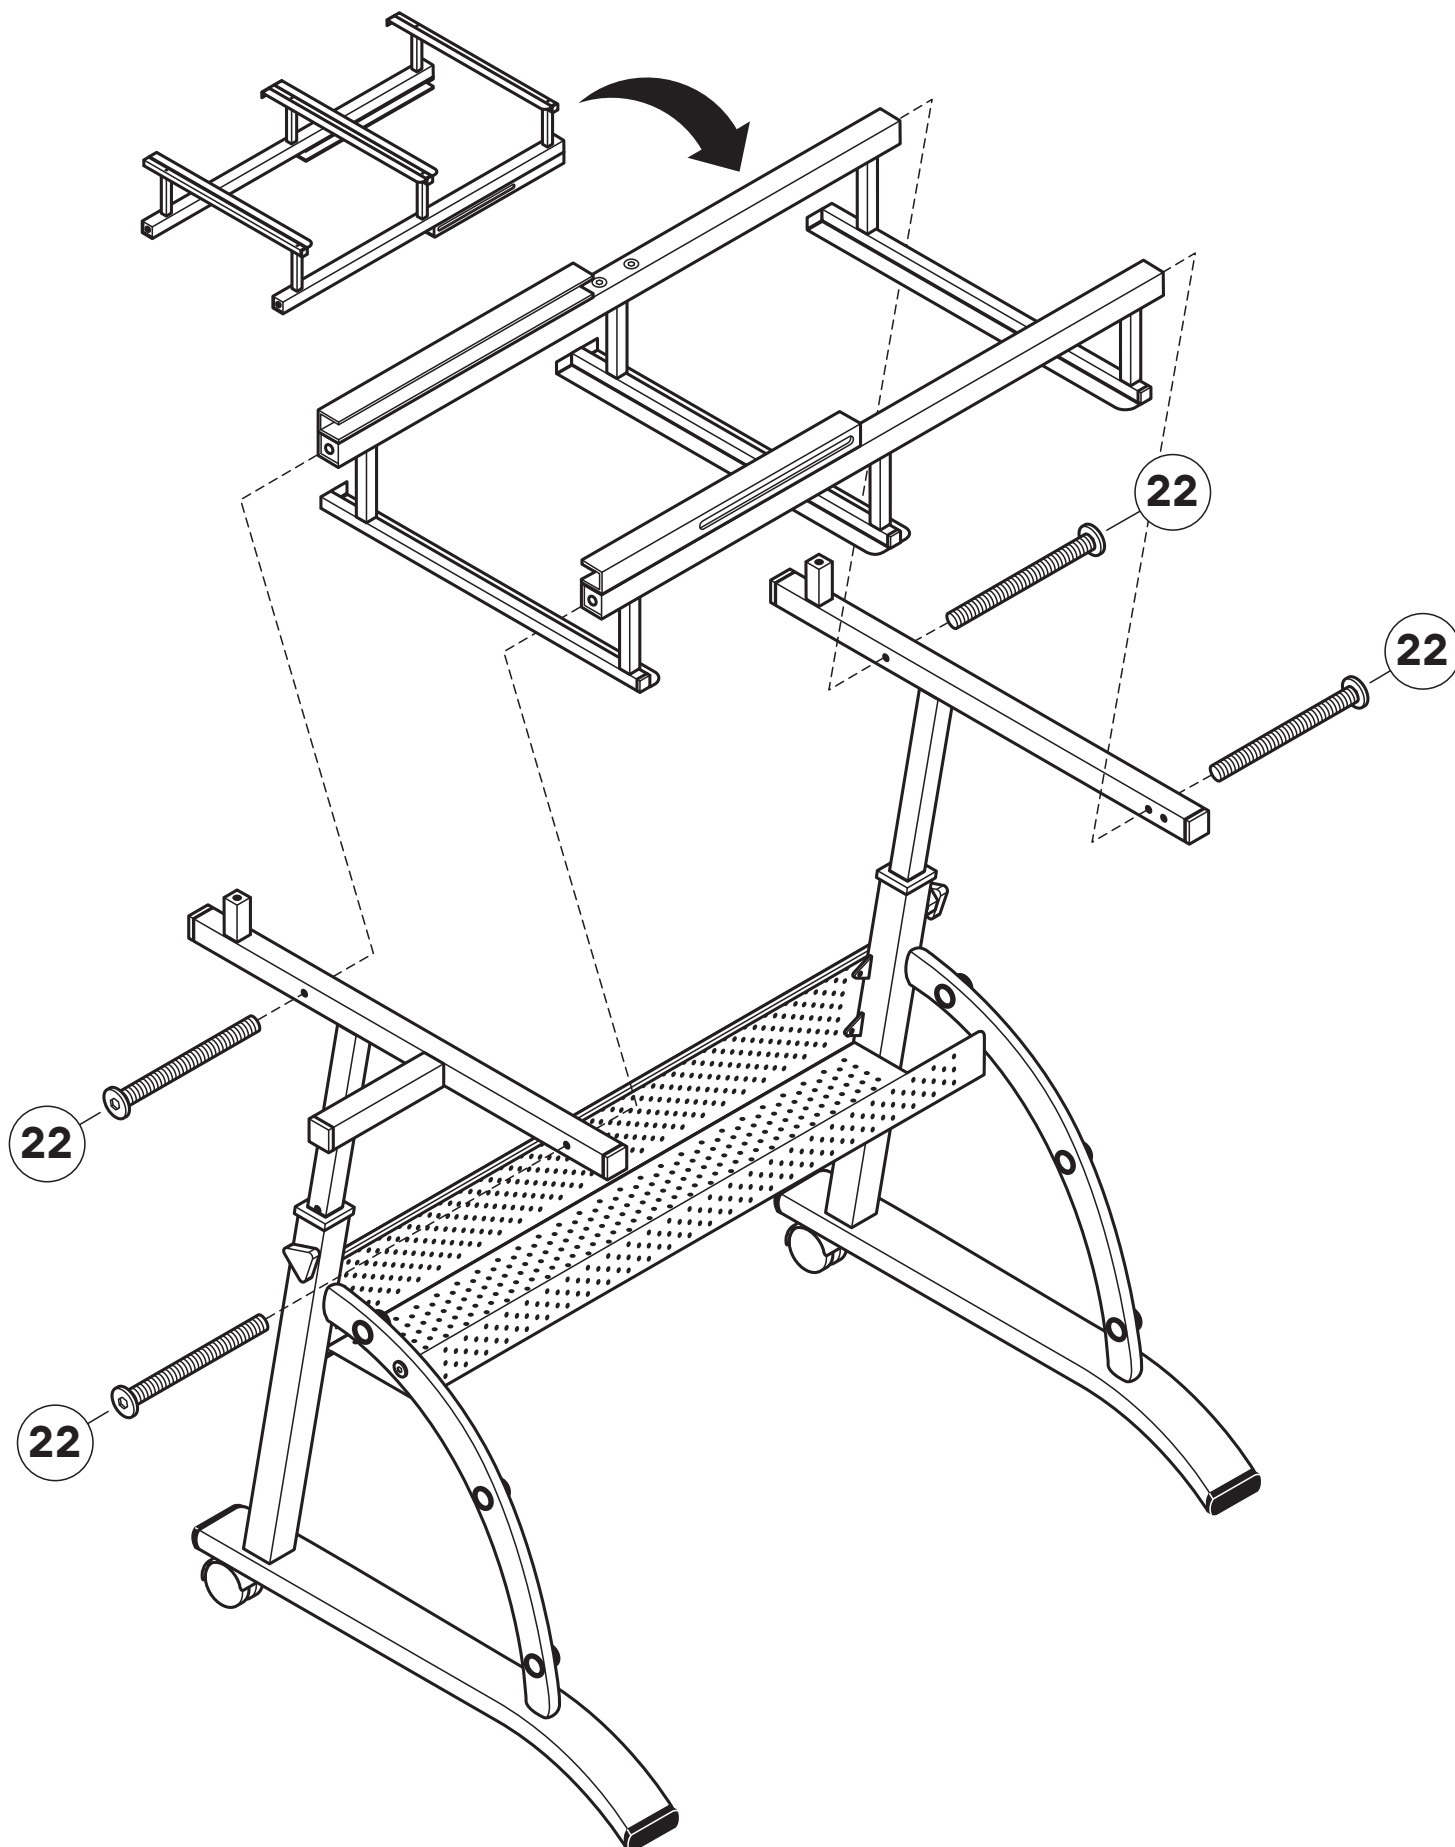 


**STEP 6**

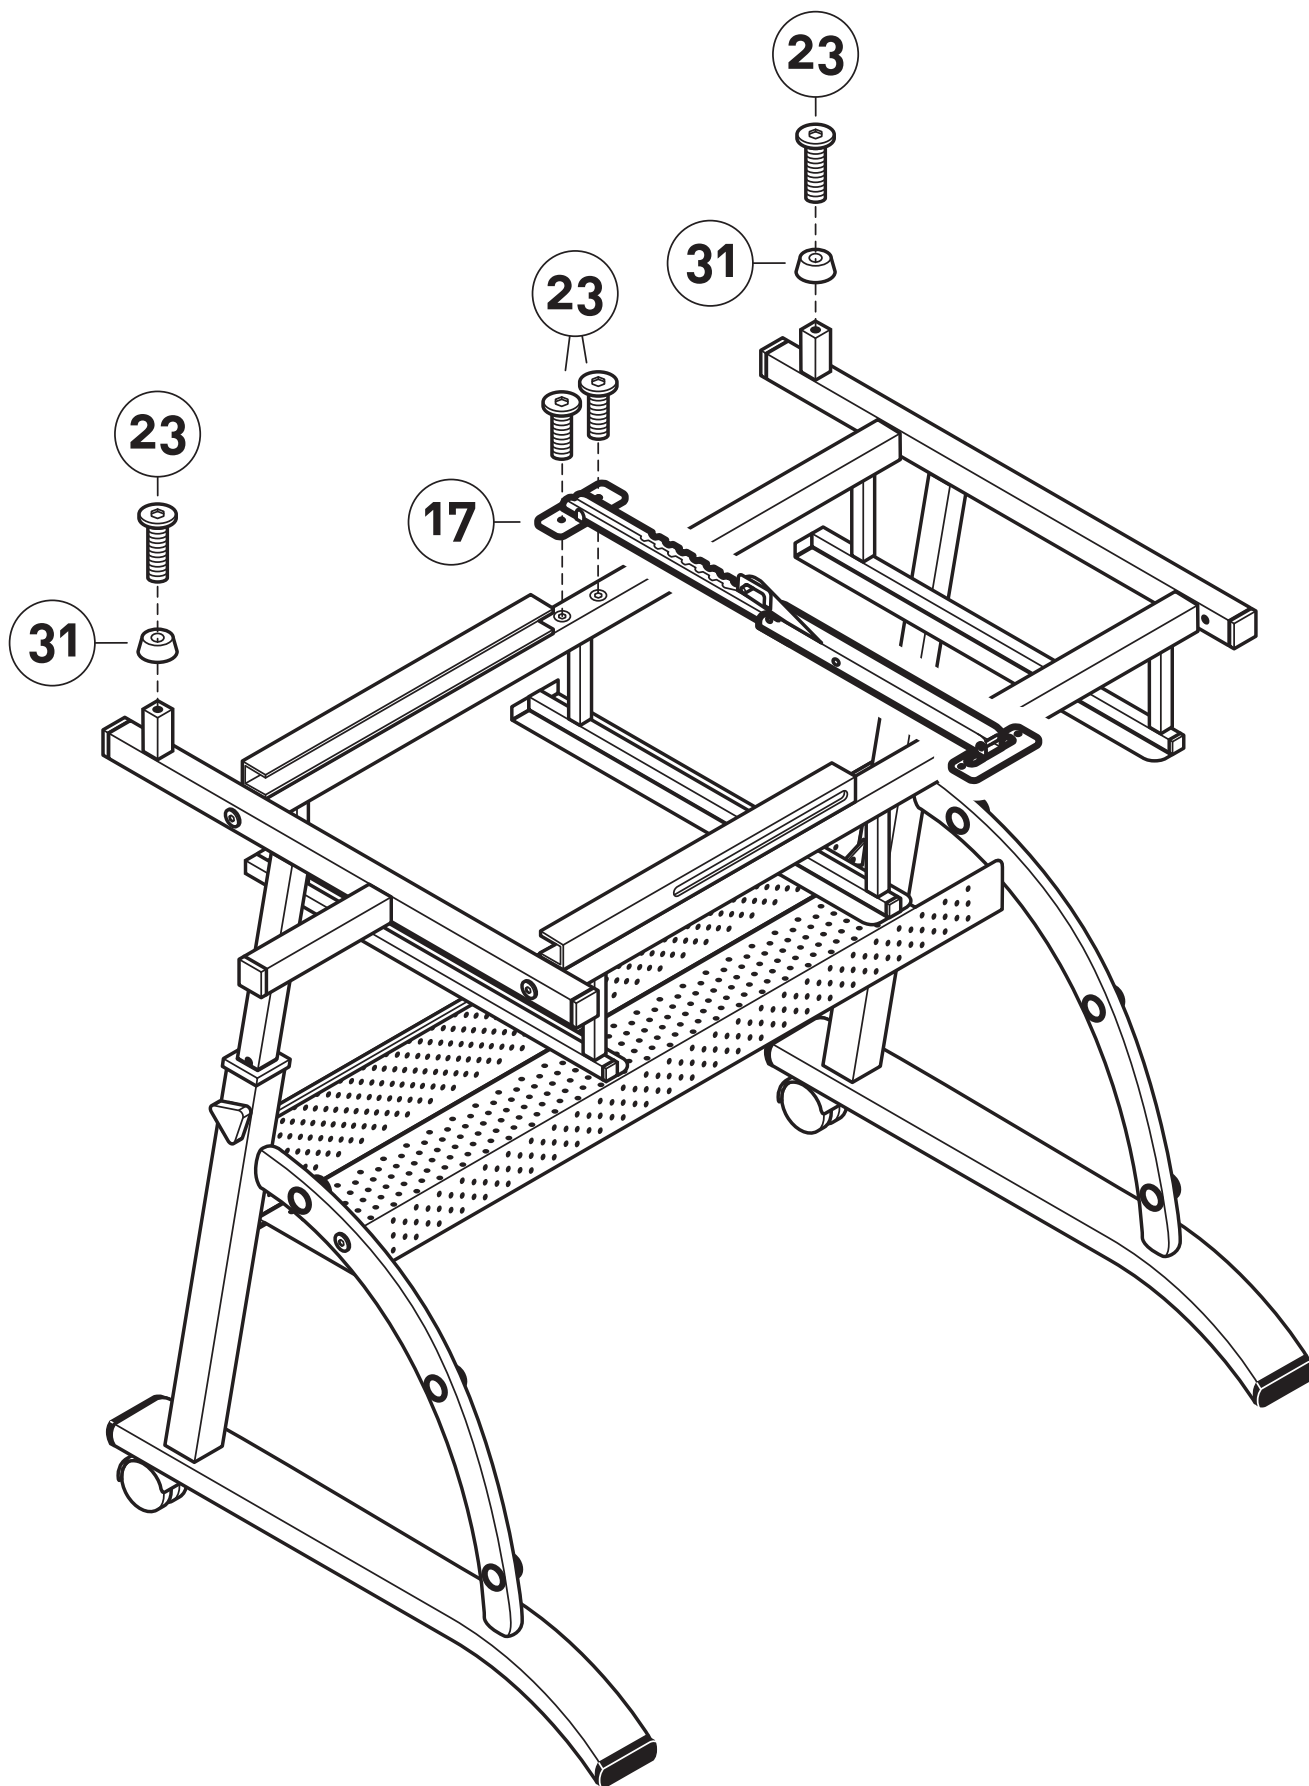 


## STEP 7

 Locate the pilot holes (see arrows) in the Shelf (6) and slide it into the rails, with the laminated side up, then attach with two Screws (24). Leave the Screws slightly loose.

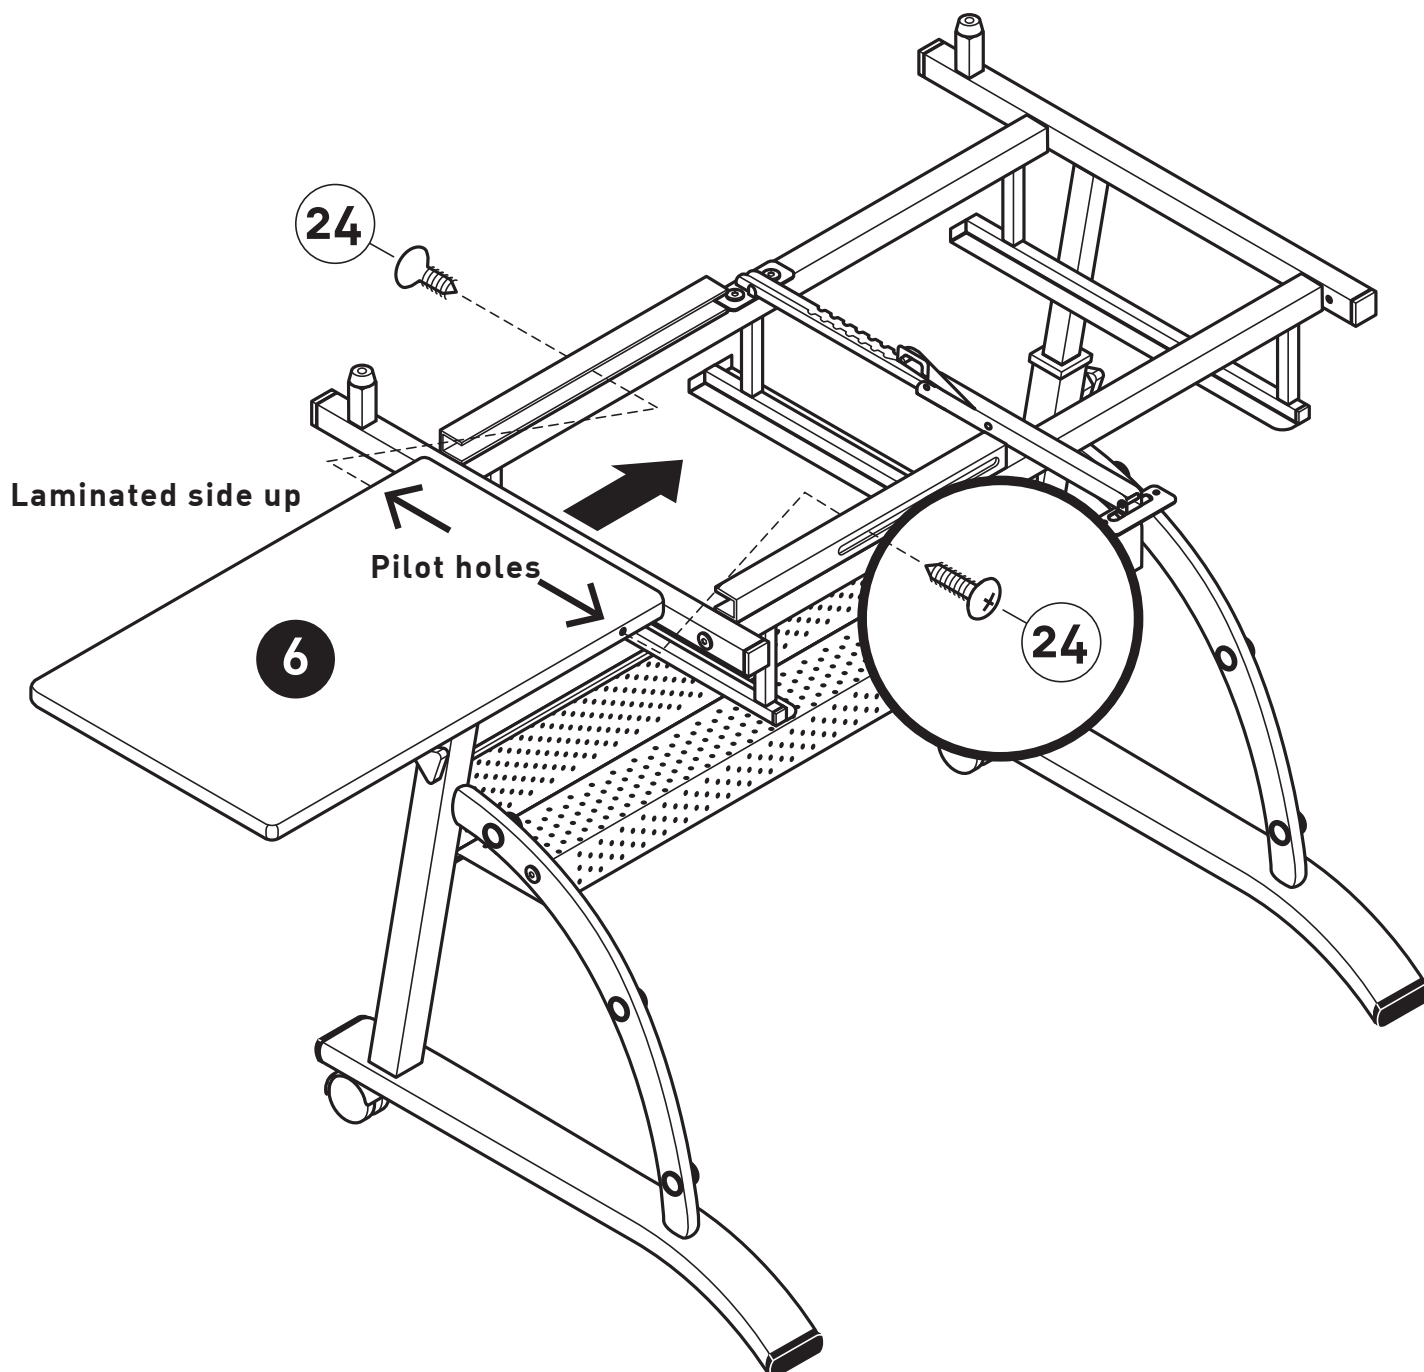


## STEP 8

 
Unfold Drawers (15) and insert the flat base.

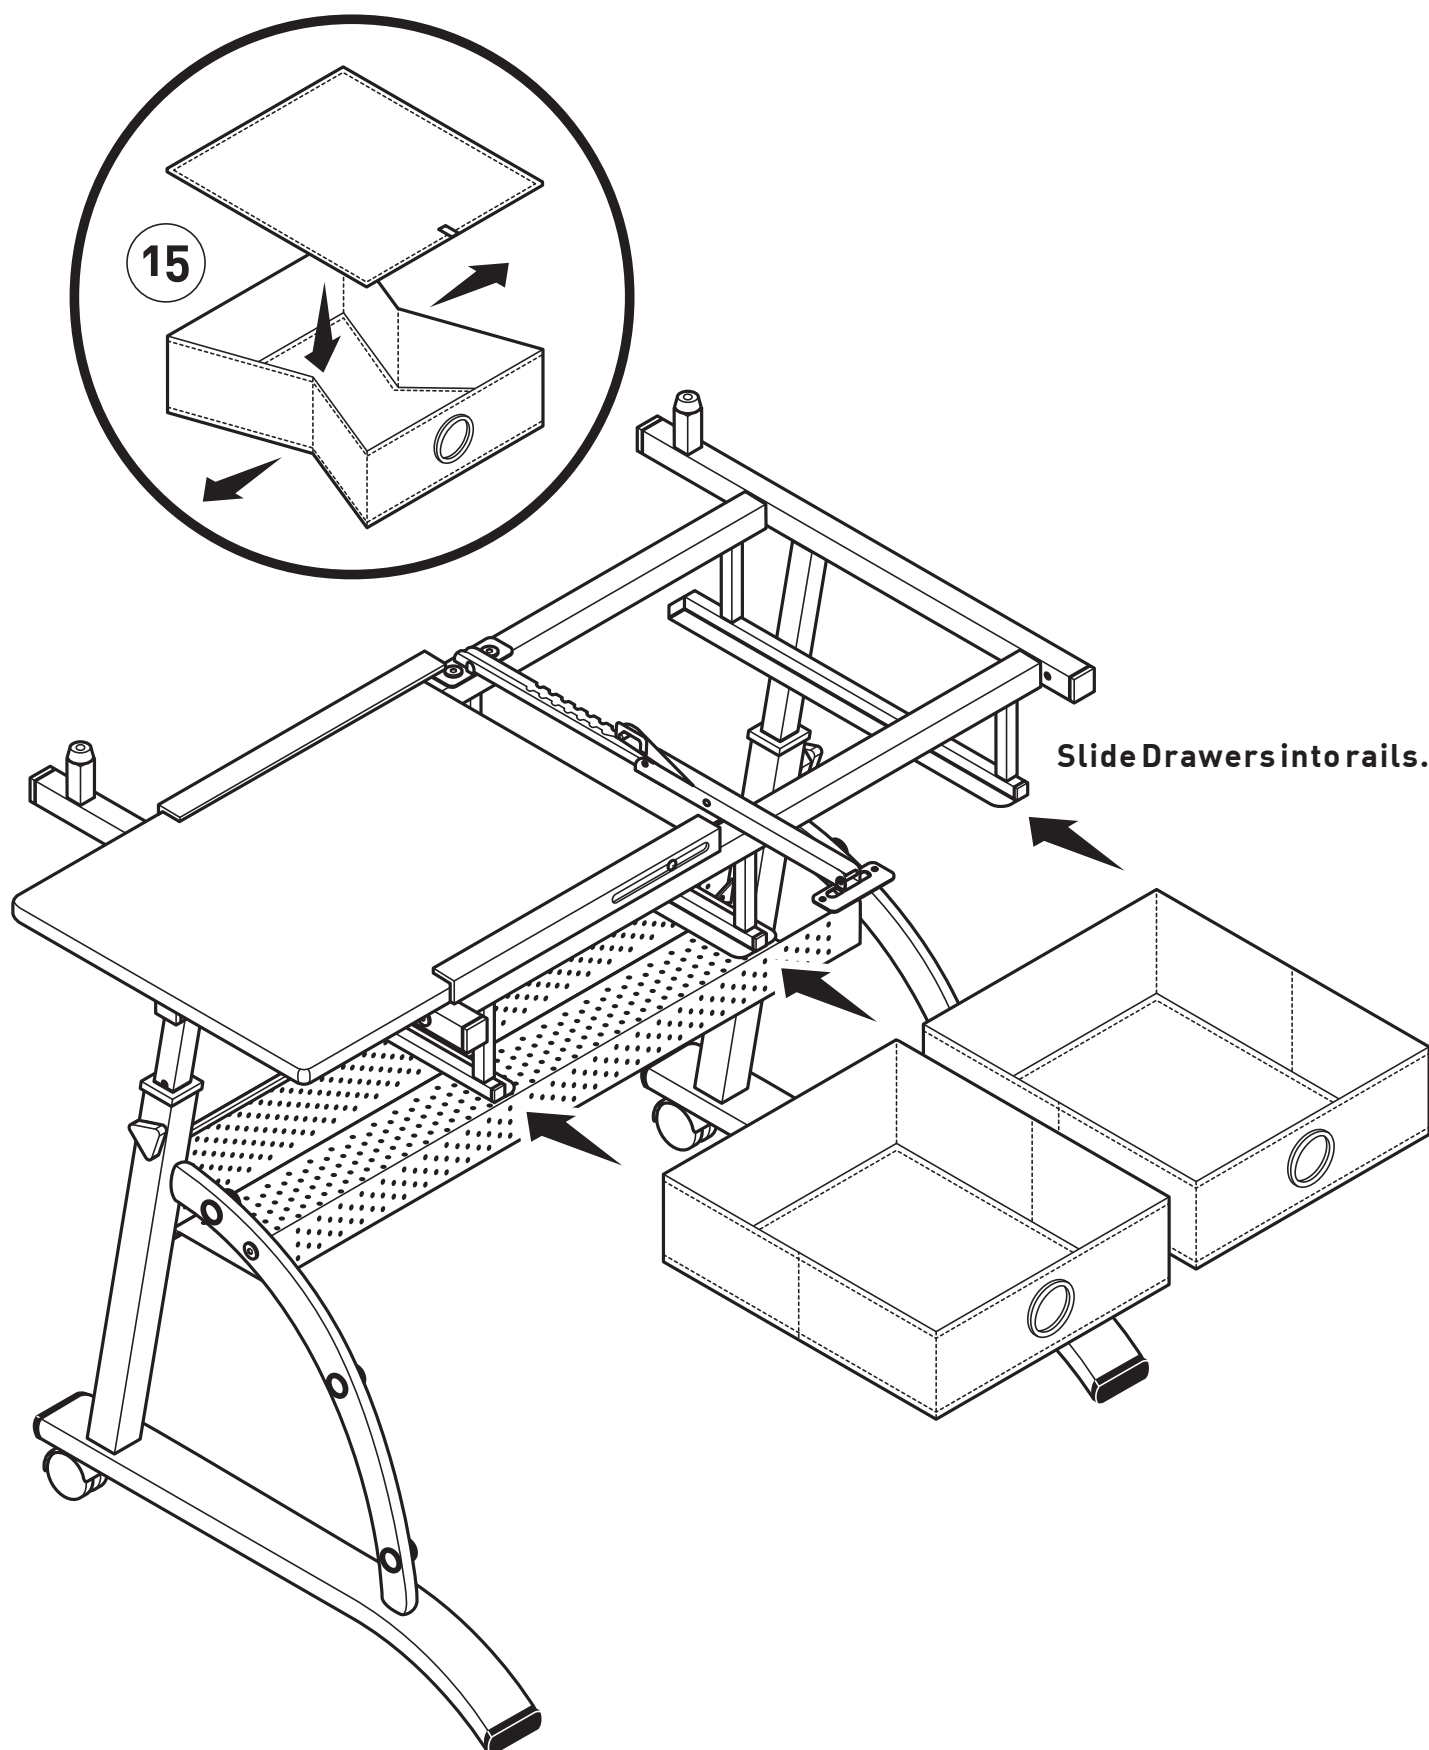

**STEP 9**

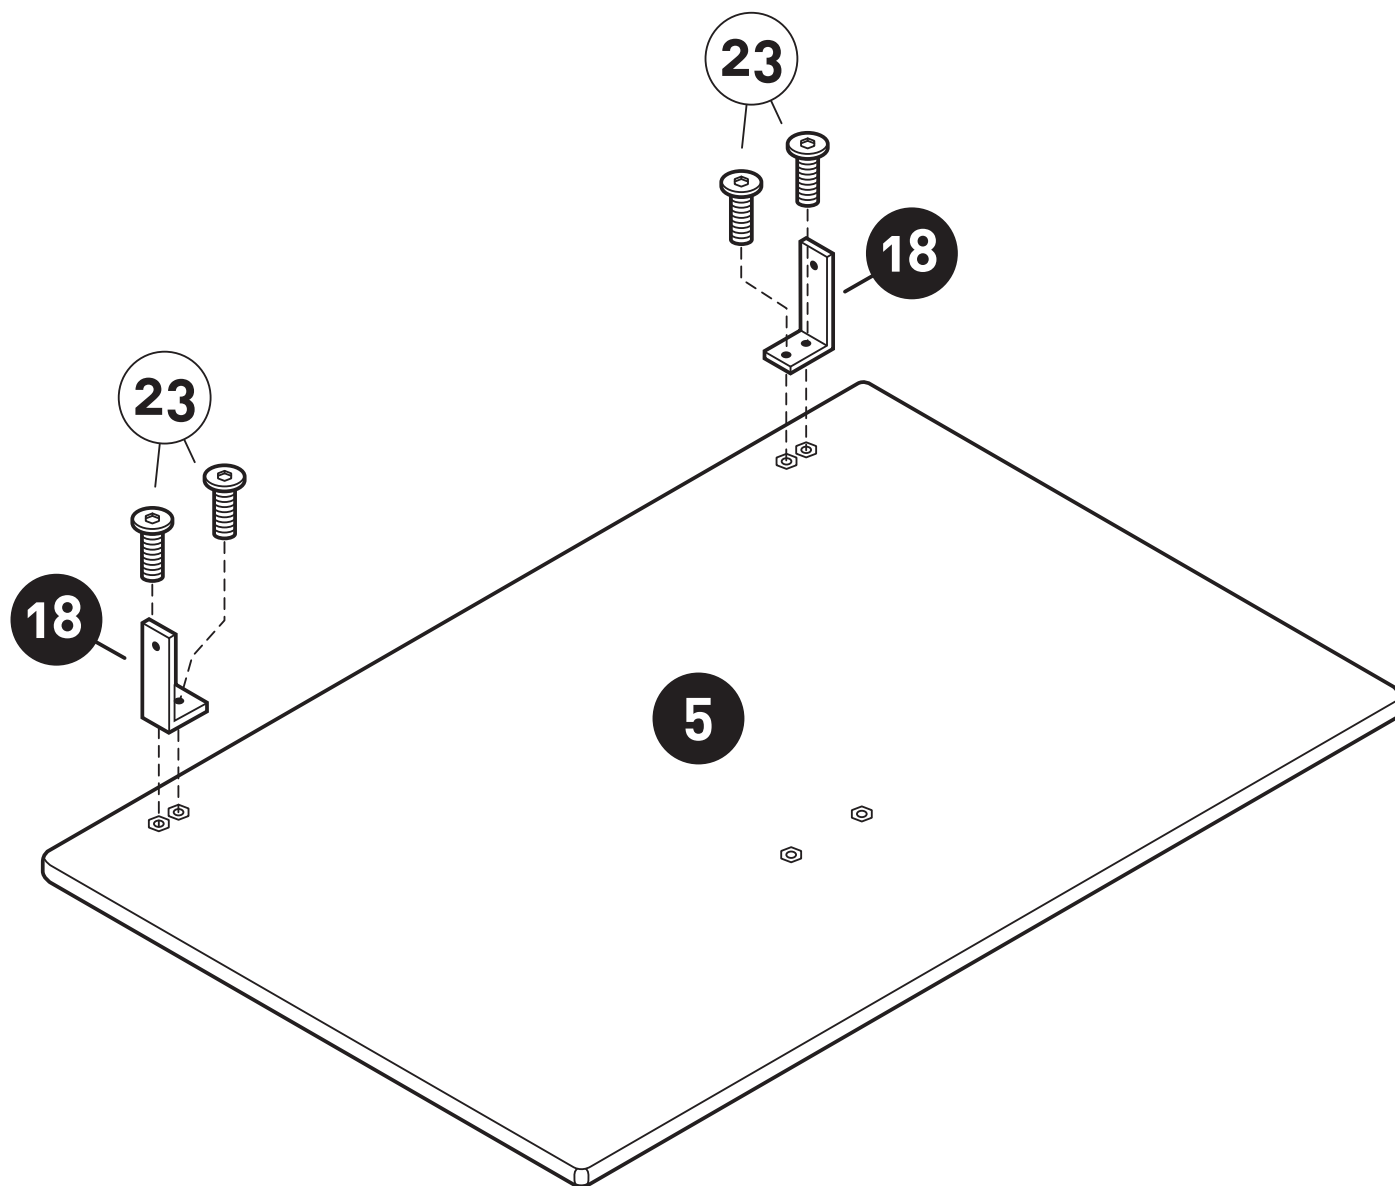 

## STEP 10

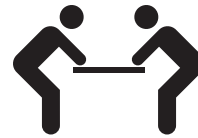 

**CAUTION!**  
Use two people.


Fold the Ratchet Arm (17) back, attach Top (5) to Legs (3 and 4) using two Allen Bolts (26), then attach Ratchet Arm (17) to Top (5) using two Allen Bolts (23).

◀ Do not overtighten (26).

To adjust the Top angle, lift the rear edge all the way up (this releases the lock mechanism), then gently lower as needed.

## STEP 11

 
Lift the Top, slide Metal Tray (32) over edge of table, and secure using Allen Screws (25) (do not overtighten). Insert Cup (33) and Art Tray (34) into slots.

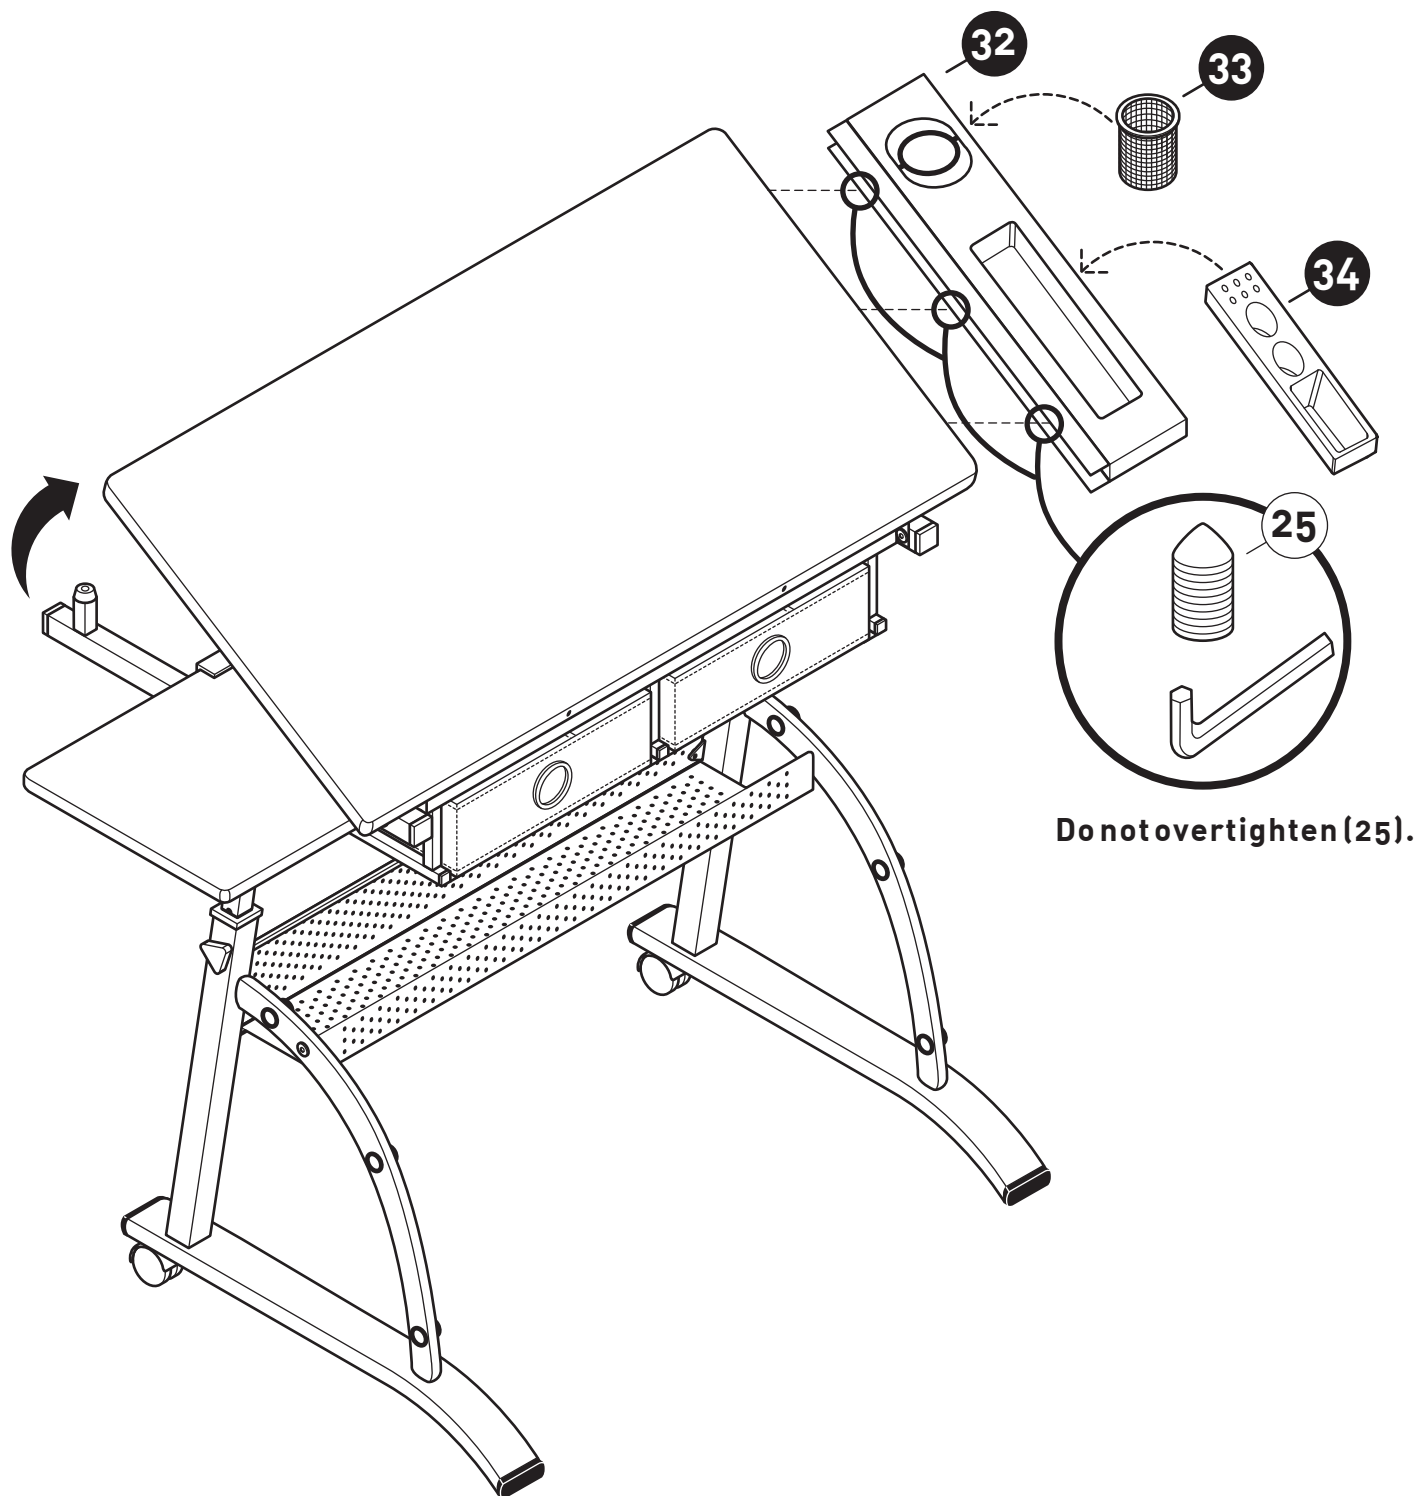




## STEP 12

 
Leave the Phillips Screws (24) slightly loose so the Pencil Ledge (16) can slide freely.

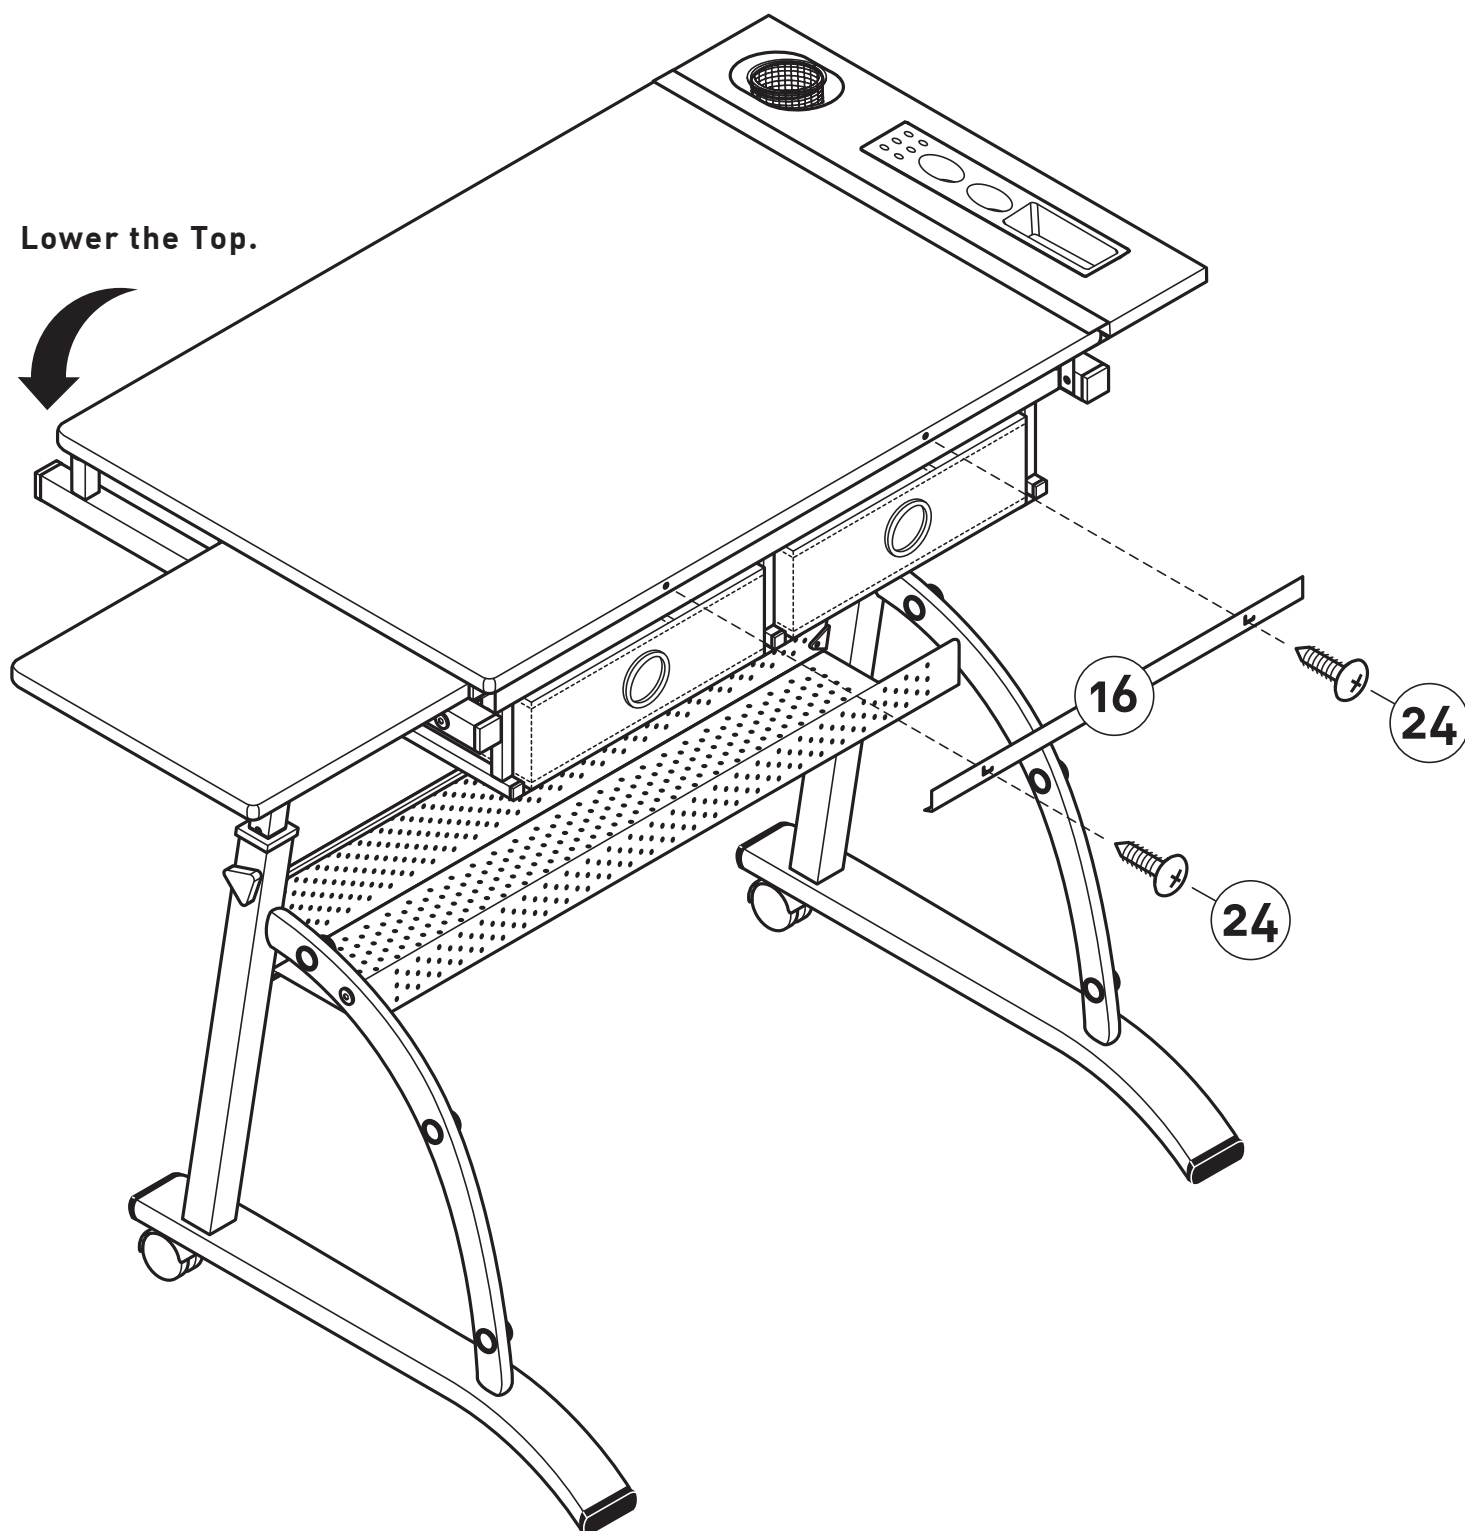

## STEP 13

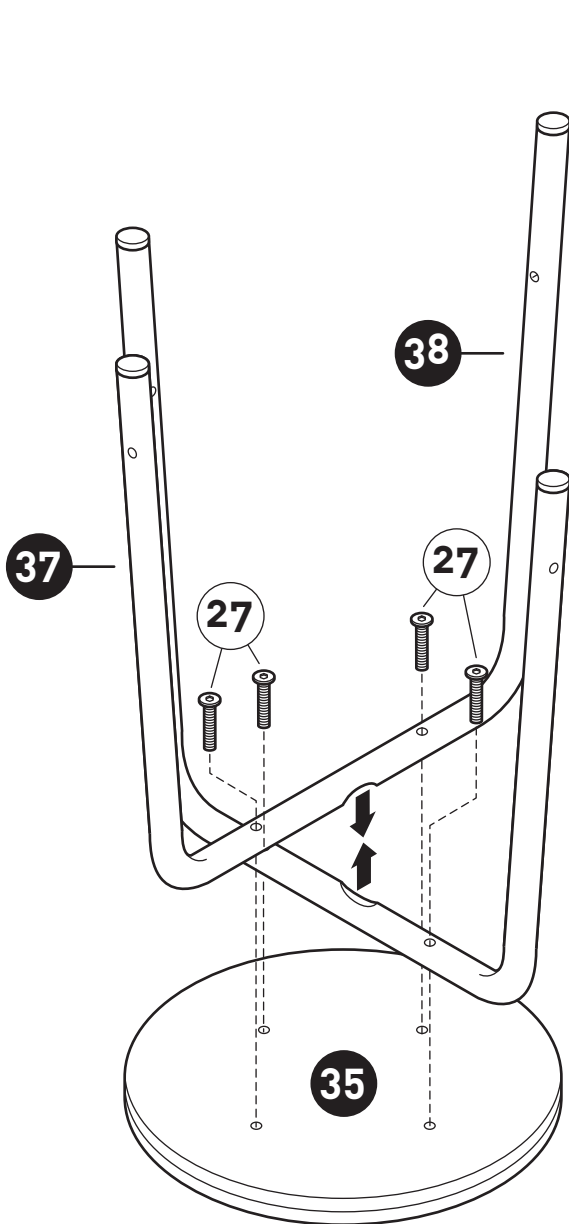 

**Note the curve on the Legs - see arrows.**

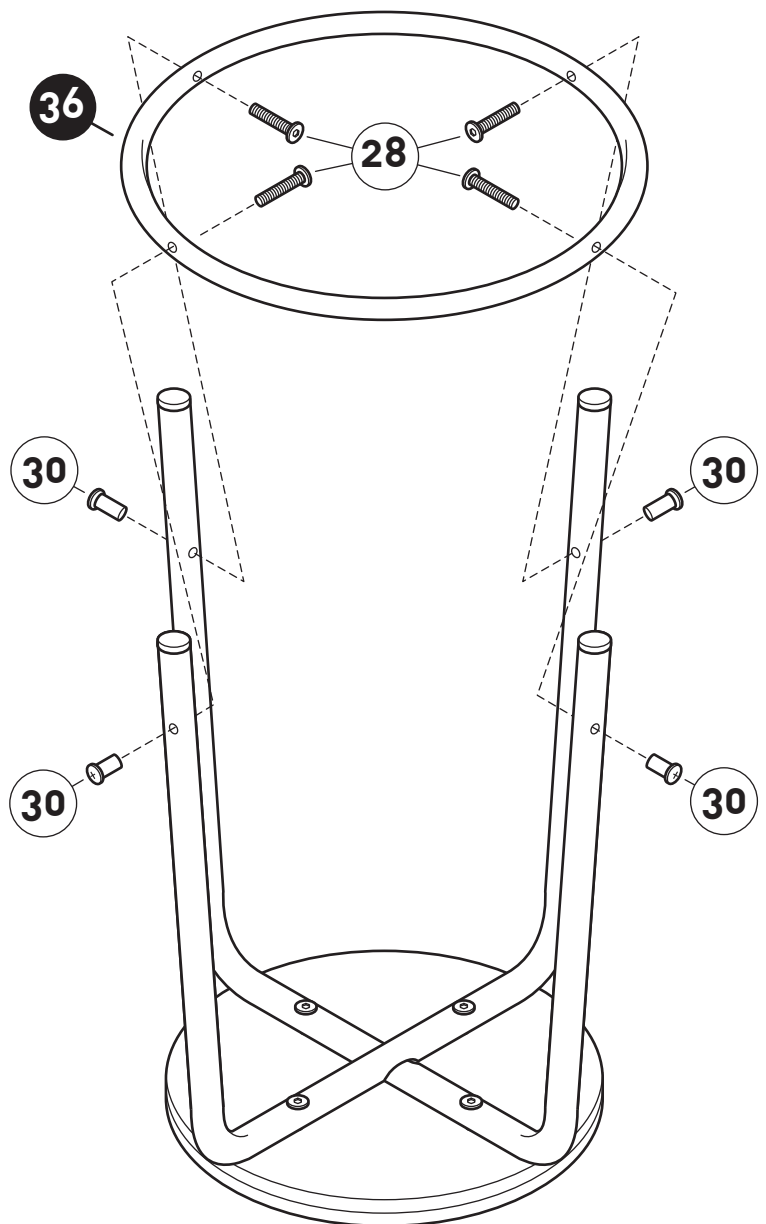 

## LIMITED WARRANTY

Studio Designs (the “Company”) warrants to the original purchaser that this product will be free from defects in its workmanship and materials, under normal residential use and service conditions, as described herein. The Company will repair or replace, at its option, without charge to the original purchaser only, the defective product or parts for a period of ten (10) years (or Thirty (30) days on closeouts and discounted products) from the date of purchase and while owned by the original purchaser. This warranty shall be effective for the applicable time period beginning from date of purchase as shown on your original sales receipt. Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. The Company’s obligation under this warranty is limited to repairing or replacing products or parts as provided herein. This product has been designed for and is intended for residential use only. This warranty is original purchaser’s sole remedy for product defects, and this warranty does not extend to any product, or damage to any product, caused by or attributable to abuse or misuse, products used for commercial or rental purposes, use modification of, or attachments to the product, and products or parts not used, maintained, or installed in accordance with the Company’s installation, maintenance and/or applicable guidelines. The warranty extended hereunder is in lieu of any and all other warranties, express or implied, including without limitation any implied warranty of merchantability or of fitness for a particular purpose. The Company will not be responsible for indirect, special, incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights which may vary from state to state. Call or email the Company for the procedure to follow when making warranty claims. Be prepared to explain the defect, provide your name, address, phone number, model number and purchase receipt information (date of purchase and retailer). If you require assistance with assembly or parts, visit [www.studiodesigns.com](http://www.studiodesigns.com) or call 866-942-0492.

**We appreciate your feedback and invite you to visit [www.studiodesigns.com/crc](http://www.studiodesigns.com/crc) to complete our Customer Response Card.**

# ARTSMITH

---

## CORE CRAFT CENTER

Assembly Manual | Please keep for future reference.